ATS Panel Data Sheet



| General Stats | | | Specification |
|---|--|---|--|
| Our Automatic Transfer Switches have been built to meet the highest standards of quality and reliability. Proven in a variety of sectors, including healthcare, defence, banking, agriculture, and residential properties. Featuring a robust motorised switch and the ability to emergency manual override, this ensures you're never without control. We offer panels ranging from 100 amp to 1600 amp with mixed cable entry options available to suit specific installation needs. | | | Powdercoat RAL7035 Finish Secondary screening to switchgear Segregation between control and switchgear Socomec motorised changeover switch with emergency manual override Deep Sea 334 controller |
| | | | Deep Sea 160 self-seeking PSU |
| ATS Panel | DIMS Bottom Entry | Weight (KG) | F30 |
| ATS Panel | DIMS Bottom Entry (mm) H x W x D | Weight (KG) | Auxiliary fused supply |
| ATS Panel 250A | | Weight (KG) 52 | Auxiliary fused supply 230VAC Output (battery |
| | (mm) H x W x D | | Auxiliary fused supply 230VAC Output (battery charger/engine heater |
| 250A | (mm) H x W x D 800 x 600 x 300 | 52 | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) |
| 250A 400A 630A 800A | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 | 52 52 96.3 115 | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals |
| 250A 400A 630A | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 1200 x 800 x 400 | 52 52 96.3 115 TBC | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals and fuses |
| 250A 400A 630A 800A 1000A Floor 1250A Floor | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 1200 x 800 x 400 1200 x 800 x 460 1700 x 800 x 600 1700 x 800 x 600 | 52 52 96.3 115 TBC TBC | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals and fuses Wiring diagram |
| 250A 400A 630A 800A 1000A Floor | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 1200 x 800 x 400 1200 x 800 x 460 1700 x 800 x 600 | 52 52 96.3 115 TBC | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals and fuses Wiring diagram Volt free contacts for |
| 250A 400A 630A 800A 1000A Floor 1250A Floor | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 1200 x 800 x 400 1200 x 800 x 460 1700 x 800 x 600 1700 x 800 x 600 | 52 52 96.3 115 TBC TBC | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals and fuses Wiring diagram |
| 250A 400A 630A 800A 1000A Floor 1250A Floor 1600A Floor | (mm) H x W x D 800 x 600 x 300 800 x 600 x 300 1200 x 800 x 400 1200 x 800 x 460 1700 x 800 x 600 1700 x 800 x 600 1900 x 1000 x 600 DIMS Top and Bottom | 52 52 96.3 115 TBC TBC TBC TBC | Auxiliary fused supply 230VAC Output (battery charger/engine heater supply) All necessary terminals and fuses Wiring diagram Volt free contacts for Mains healthy Mains failed Generator on load |